

3. Loosen the Fixing screw to lower down the Block all the way. (Figure 6-7)

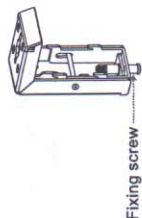


Figure 6

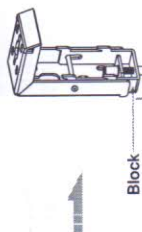


Figure 7

4. When mounting the screen onto Floating wall brackets, make sure the Up groove and the Down groove on the housing match with the Up button and the Down button on the bracket separately. (Figure 8-9).

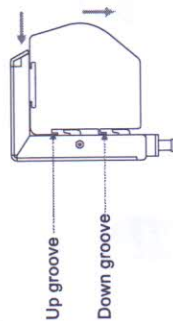


Figure 8

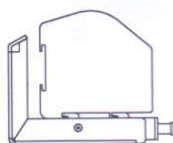


Figure 9

5. Fasten the Fixing screw on the bracket, to fix housing tightly onto the brackets. (Figure 10-11)

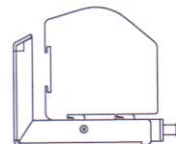


Figure 10

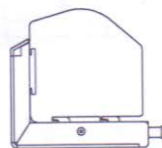


Figure 11

Ceiling hang installation

To choose the tapping screws with hanger or other screws with hanger (unprovided) according to ceiling material.
(Tips: Wood screws $\phi 5 \times 40$ for wood ceiling and tapping screws for concrete wall.)

1. To drill two same holes with an electric drill horizontally with wall, then fasten hangers(unprovided) onto the ceiling. (Figure 12)

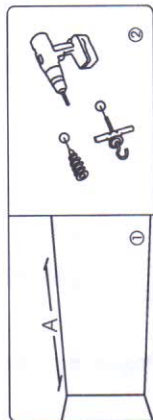


Figure 12

2. Use M5 x 10 screws in the accessory package to fix the ceiling hanger into wall bracket, make sure the tightening screws on wall bracket are fixed tightly. (Figure 13-14)

 


Figure 13

 


Figure 14

3. After fix the ceiling hanger, make sure the up groove and the down groove on the housing match with Up button and Down button on the bracket separately and fasten the fixing screw on the bracket, to fix housing tightly onto the brackets. (Figure 15-16)

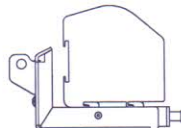


Figure 15

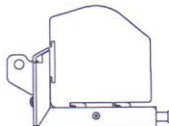


Figure 16

4. After finished step 2 and step 3, check whether wall bracket fix on the housing of screen tightly then you can hang the screen according to the figure 17.



Figure 17