


Instructions

To avoid overheating the motor, do not continually retract and lower the screen for over 4 minutes at a time. If the motor overheats, it will need a cool down time of 2 minutes. The motor does not need any lubricants. The drop and retract limit of the screen is factory preset to an optimal configuration. Please ask your local dealer or professional to adjust settings to avoid damaging the motor.

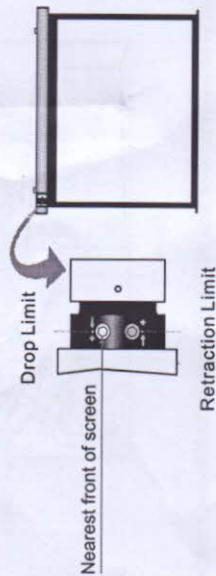

adjusting the bottom drop of the fabric
(+/-) Turn anticlockwise for the screen to come down further.

Turn clockwise to reduce the drop and therefore the amount of black border at the top of the screen.

adjusting the top stops on the screen fabric.

(↔+) Turn the allen key anticlockwise to make the screen stop earlier when going into the case. If you turn the key clockwise the screen will retract further into the case. **MAKE SURE YOU TURN THIS CAREFULLY AS WE WILL NOT BE RESPONSIBLE FOR DAMAGE SHOULD THE MOTOR OR FABRIC SHOULD IT TRY TO PULL THE FABRIC TOO FAR INTO THE CASE.**

Each turn of the key will only make a small difference to the drop of the screen approx 10cm.

Warnings

- Always ensure that there is solid wood, concrete, metal or a solid wall to fix to. Never use just plasterboard and ensure that you test the fixings carefully before hanging the screen.
 - When you offer up the screen ensure that you have it locked into the bracket securely at both ends.
- IF YOU HAVE ANY CONCERNS ABOUT THE STABILITY OF THE BRACKET FIXINGS DO NOT HANG THE SCREEN TAKE PROFESSIONAL ADVICE FROM A BUILDING SURVEYOR OR OTHER PROFESSIONAL INSTALLER.**
- While installing electrical motors, please hire professionals or your local dealer to ensure safety.
 - Please read the following as any damage to the screen surface will affect the quality of the picture:
 1. Avoid contact or touching the screen surface as it may cause scratches or tears.
 2. Do not write or draw on the surface
 3. Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products.
 - Roll up the screen after every use. Ensure that the screen is level when installing, do not pull on the sides or fold the screen.
 - To prevent damage, the operating and maintenance of the screen should be done by adults.

	Ignoring the safety warnings may lead to injuries and/or damaging the product.		Fixtures should be installed in a secure manner to avoid accidents or the screen falling.
	Do not connect any electrical attachments or remote controls.		Roll up the screen after every use. Leaving it hanging for a long period of time may cause the fabric to stretch.
	Please contact your local dealer for repairs or maintenance. Avoid taking apart the screen or the warrants will be void.		Refrain from hanging anything on the screen as it may cause the screen to fall.

Product specifications are subject to change.